

# XJ

## QUICK START GUIDE



02 VEHICLE ACCESS  
04 COMFORT AND SAFETY  
07 CLIMATE CONTROL  
08 FACIA OVERVIEW  
09 TRANSMISSION

10 EXTERIOR LIGHTING  
10 WIPERS AND WASHERS  
12 AUDIO SYSTEM  
14 NAVIGATION AND TELEPHONE SYSTEMS  
16 GAS STATION INFORMATION

Some of the information in this guide may not apply to your vehicle.  
You must refer to your Owner's Handbook for full operating instructions.

# Vehicle access

## Locking and unlocking

Dependent upon specification and vehicle configuration, operation of the remote handset may differ from the following.

### Remote handset



### Two stage unlocking

A security feature that unlocks only the driver's door and trunk on the first press of the button. It can be selected via the navigation system user operation menu (where fitted). Alternatively this can be set by your Dealer.

A 45 second automatic door relock can also be set by your Dealer.

### Unlocking with the door key

If the vehicle is unlocked manually via the door lock, the key must be inserted in the starter switch within 15 seconds to prevent the alarm being activated.



- Press to release door key.



- Press once to lock the vehicle and arm the alarm.
- Press twice within three seconds to fold the door mirrors (with power fold option).
- Press and hold to close the sunroof and any open windows (**Global closing**).



- Press once to disarm the alarm, unlock all doors and unlock the trunk.
- Press and hold to open the sunroof and windows (**Global opening**).



- Press once to switch the headlamps on for 25 seconds.
- Press three times in three seconds to activate the panic alarm.



- Press to unlock and open the trunk

## Central door locking

With the starter switch in position I or II, press the facia switch (arrowed) to lock or unlock all the doors, trunk and fuel filler flap.

To close or open the windows and sunroof, press and hold the switch.



### Drive away door locking

With the starter switch in position II, the trunk, doors and fuel filler flap will automatically lock when the gear selector is moved from **P** (Park) or **N** (Neutral).

This feature can be disabled by your Jaguar Dealer.

### Reminder - Fuel filler flap

The driver's door must be unlocked before operating the fuel filler flap release button.

## Luggage compartment

 
The trunk is electrically locked and unlocked in conjunction with the driver's door.

To open with the vehicle locked:

- Press the button on the remote handset.

To open the trunk with the vehicle unlocked:

- Press the button **1** on the fascia .
- Press the release button **2** on the trunk lid.

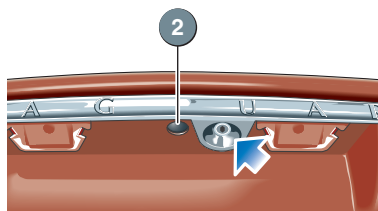

### Care points

- Release buttons on the fascia and trunk lid are disabled when the vehicle is alarmed or in Valet mode.
- The trunk has a power closure feature which removes the need to slam the lid.
- The vehicle alarm will sound if the trunk is opened with the key when the vehicle is locked.

In the event of a flat battery or other problem opening the trunk, use the starter key in the lock (arrowed in illustration).

## Valet locking

A green-headed valet key is supplied for when you have your vehicle valet parked. With Valet mode active, the trunk and glove compartment release switches are inhibited.

 
To activate Valet mode:

- Press the **VALET** switch, an audible chime will sound to confirm operation. If the starter switch is in position **II** the message centre will display **VALET MODE**.
- Turn off the starter switch, remove the standard remote handset and hand the green-headed key to the parking attendant.
- Access to the trunk and glove compartment is regained when the unlock button of the standard remote handset is pressed.




# Comfort and safety

## Seat adjustment

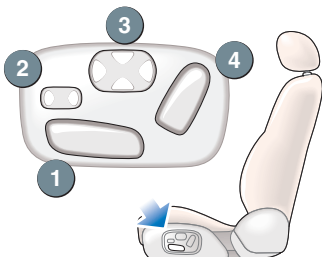

### Driver's seat

 1. Seat forwards and back, cushion height and front tilt control switch.
2. Seat cushion extension switch (if fitted).
3. Lower backrest lumbar support switch.
4. Seat recline and head restraint height switch.

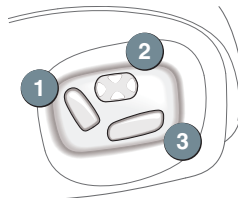


### Rear seat

1. Backrest recline and head restraint height switch.
2. Lower backrest lumbar support adjustment.
3. Front seat position (for rear passenger comfort).

### Rear seat controls inhibitor

The rear seat controls will be inhibited if the rear window isolation switch has been operated (see **Windows and Door mirrors**).
 
## Steering column and Pedal adjustment

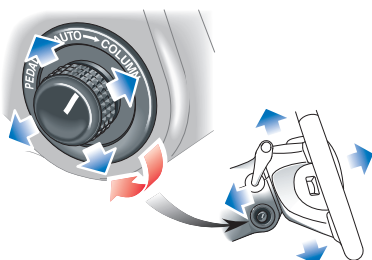


### Steering column

Rotate the control on left-hand side of steering column to **COLUMN** position then move control to adjust the height and reach.

### Automatic seat movement

 To prevent automatic movement of the driver's seat when the starter switch is turned on or off, turn the control to either **PEDALS** or **COLUMN**.

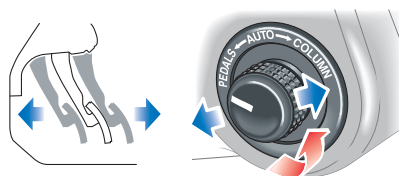

### Pedal adjustment

Rotate the control to **PEDALS** then move control to adjust the fore/aft position of the pedals.

 
### Driver seat movement with starter switch off

If the control is set to **AUTO**, the position of the steering column and driver's seat will automatically adjust to provide greater clearance for exit and entry when:

- the starter switch is turned to position **0** and the driver's door is opened.
- the starter key is removed.



## Windows and Door mirrors

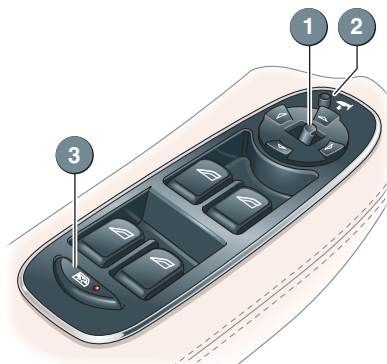

### Windows

The windows can be fully opened or closed with a single operation of the switch.

- To open the window, press the appropriate window switch. Press the switch again to stop the window from fully opening.
- To close the window, pull the switch up. Pull the switch again to stop the window from fully closing.

Press button **3** to inhibit the operation of the rear window switches and electric rear seats (when fitted).

### Door mirrors

To adjust the door mirrors, move the mirror selector switch **1** left or right to select the appropriate mirror. Use the four-way switch to adjust the position.

#### Automatic mirror dip (when fitted)

The passenger mirror will automatically dip to provide a better view along the side of the vehicle when reverse is selected.

#### Power fold mirrors (when fitted)

The mirrors can be folded towards the door for better clearance/protection by pressing button **2**. Press the button again to unfold the mirrors.

The mirrors will automatically unfold next time the vehicle is unlocked with the handset.

#### Reminder - Global closing

After leaving the vehicle, an open window or sunroof can be closed by pressing and holding the lock button on the remote handset.

## Driving position memory



### Remote handset programming

With the key in the starter switch and the **M** button illuminated, you can program a remote handset to a memory position by pressing any button on the remote handset.

Once you have adjusted the driver's seat, steering column, pedals and exterior mirrors for your ideal driving position, the vehicle can memorize these settings for future use.

1. Insert the key into the starter switch and leave in the **OFF** position.
2. Push the memory button **M** and a red indicator in the switch will illuminate for five seconds.
3. Whilst the indicator is illuminated, press button **1**, **2**, or **3** to memorise the current settings.

The indicator will extinguish and an audible chime will sound to confirm that the settings are memorised. Any existing settings will be overwritten.

To recall a memorised driving position press button **1**, **2** or **3**.

# Comfort and safety

## Seat belts and Child restraints



A warning indicator in the instrument pack will illuminate to alert you when the driver's and/or front passenger's seat belt is unbuckled. Dependent upon specification this may be accompanied by an intermittent chime.

### Child seats

It is important to remember that a child's weight, rather than age, determines the type of seat that is required.

Refer to **Child Safety** in the Owner's Handbook to determine the correct seat for your child.

### Recommended child seat

Jaguar recommend the use of a LATCH (Lower Anchors and Tethers for Children) child seat with a top tether strap.

The LATCH child seat can only be fitted in the outer seating positions of the rear passenger seat.

### Automatic Locking Reels (ALR)

 
All passenger seat belts have ALR fitted for use with child seats.

- To engage: extend the belt to its maximum length to enable the locking mechanism.
- To disengage: unbuckle the belt then allow it to fully retract.

With ALR enabled, as the seat belt retracts, it will automatically lock preventing re-extension.

Ensure passengers do not fully extend the restraints and inadvertently engage this feature during normal use.

## Overhead console

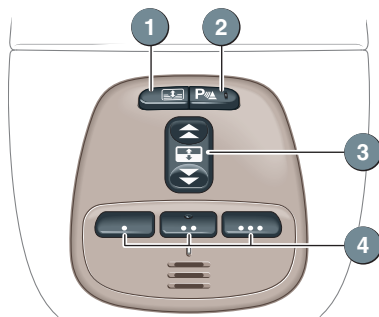

### Parking assist care points

Sensors may activate on detection of water, snow or ice on their surface. This is entirely normal and regular cleaning will aid performance.

Parking assist may sound if it detects a signal operating at the same frequency to that of the sensors (e.g. motorcycles, airbrakes).

### Rear window blind

Press button **1** to raise the rear window blind. Press the button again to lower the blind.

### Parking assist

Press button **2** to turn off the front and rear parking sensors. Press again to turn on.

### Sunroof

The sunroof can be fully opened or closed with a single operation of switch **3**.

### Closing remotely

If the sunroof has been left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset.

### Garage door opener

The buttons **4** on the overhead console can be programmed to operate external devices, i.e. garage doors, entry gates, security systems, etc.

## Climate control

*Primary functions of the climate control system.*



For those vehicles fitted with the touch screen navigation system, the advanced climate control functions can be accessed by pressing the **Climate** button.

### Recommended mode

Select **AUTO** as the normal operating mode. This will help prevent window misting and odours from the climate control system.

### AUTO (automatic) mode



Press to select automatic operation of the climate control system. The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting, without further adjustments.

Screen heaters and timed air recirculation may be selected whilst in **AUTO** mode. Selecting any other function will cancel **AUTO** operation.

### Air conditioning (A/C)



Air conditioning is an integral part of the climate control system, providing cooled and dehumidified air for occupant comfort; the dry airflow is also effective in preventing misting of the windows.

Air conditioning is controlled automatically when the vehicle is in **AUTO** mode.

Deselecting **A/C** will cancel **AUTO** mode.

### External water deposits

The air conditioning system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.



### Temperature selection



Press the red buttons to increase temperature and the blue buttons to decrease temperature.

To quickly jump from **HI** or **LO** to a mid-range temperature setting, press and hold the **AUTO** button for a few seconds.

### Dual temperature zones



With the **DUAL** button LED illuminated, the system provides separate temperature control of the driver and front passenger zones.

Press the button to deselect dual mode. The temperature of the passenger zone will automatically adjust to that of the driver's zone and the temperature of both zones will be controlled by the driver's temperature control buttons.

### Windshield defrost and demist



Press the **DEF** button to remove frost or heavy misting from the windshield. The rear screen and windshield heaters will be activated.

To deselect defrost mode, press **AUTO**. The rear screen and windshield heaters will remain on.



### Heated windshield

 


### Heated rear screen and door mirrors

### Screen heaters

The windshield and rear screen heaters will automatically activate on operation of the **DEF** button or detection of exterior temperatures at 5°C (40°F) or lower.

# Facia overview

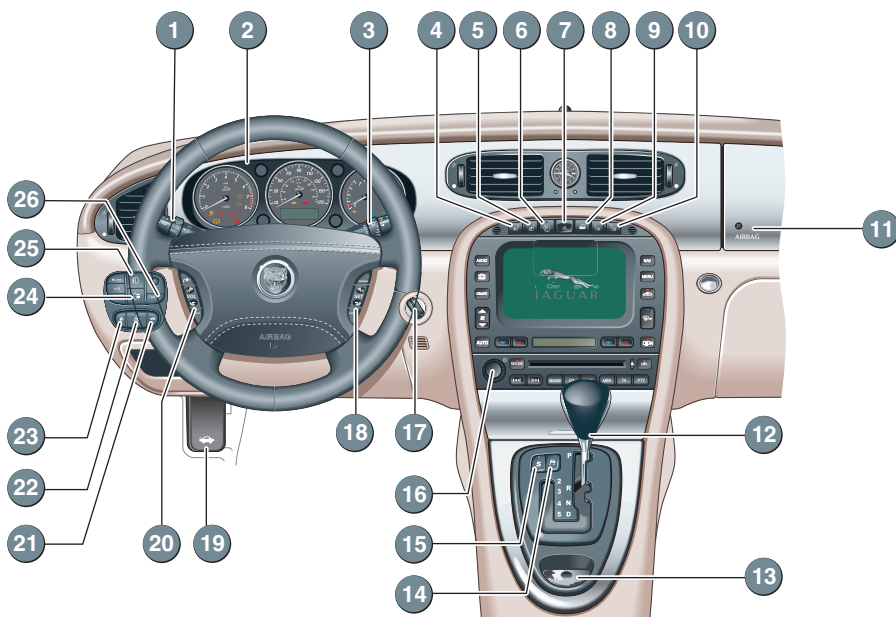

- |   |  |   |
|---|--|---|
| 1 Direction indicators/external lamps and trip computer | 10 Passenger's seat heater switch      | 19 Hood release                                 |
| 2 Instrument pack                                       | 11 Passenger's airbag status indicator | 20 Audio and telephone switches                 |
| 3 Wiper and washer switch                               | 12 Gear selector lever                 | 21 Trunk release                                |
| 4 Driver's seat heater switch                           | 13 Electric Parking Brake              | 22 Adaptive Cruise Control forward alert switch |
| 5 Driver's seat ventilation switch                      | 14 DSC switch                          | 23 Fuel filler flap switch                      |
| 6 Automatic speed limiter switch                        | 15 Sport mode switch                   | 24 Rear fog lamp switch                         |
| 7 Hazard warning switch                                 | 16 Audio system                        | 25 Front fog lamp switch                        |
| 8 Master locking switch                                 | 17 Starter switch                      | 26 Valet switch                                 |
| 9 Passenger's seat ventilation switch                   | 18 Cruise control switches             |   |

## Passenger air bag indicator



The front passenger seat is fitted with an occupancy sensor system that determines the state of seat occupancy and sets the air bag status to suit:

- Seat unoccupied - air bag deactivated and indicator off.
- Seat occupied - air bag activated and indicator on.

- Seat occupied by a child seat or low weight object - air bag deactivated and indicator on.
- Passenger position too close to an air bag - air bag deactivated and indicator on.

For further information refer to **Occupant Protection** in the Owner's Handbook.



## Warning indicators (information)

Indicators may illuminate during normal driving to indicate that a particular system or feature is operating. If any other warning indicator illuminates, refer to the Owner's Handbook.



Seat belt reminder



Electric Parking Brake on



Adaptive Cruise Control active



Side lamps on



Headlamp high beam on



Front fog lamps on



Rear fog lamps on



Direction indicator

## Transmission

### Gearshift interlock

The starter switch must be in position **II** and the footbrake applied before the gear selector can be moved from **P** (Park) to **R** (Reverse).

The lever can be moved into **P** with the starter switch off.

 
### Gear selector

The J-gate gear selector lever is designed to accommodate two different driving techniques as follows:

- Automatic selection: use the right-hand side of the selector gate.
- Manual selection: use the left-hand side of the selector gate to individually select 5th, 4th, 3rd or 2nd gear.

With the gear selector in **D** (Drive) and Sports mode active, the transmission will use 6th gear less at higher cruising speeds.

Fuel consumption will be adversely affected.

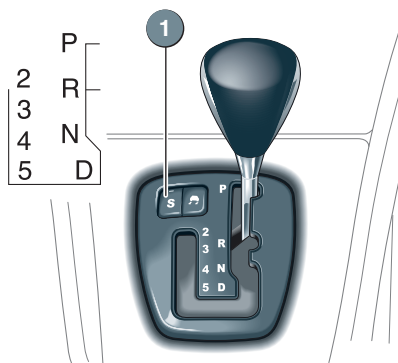


### Sports mode

Press switch **1** to select Sports mode. A red indicator in the switch will illuminate to indicate that Sports mode is active. When Sports mode is selected, the gear change points are modified to make full use of the engine's power.

# Driving
 
## Exterior lighting

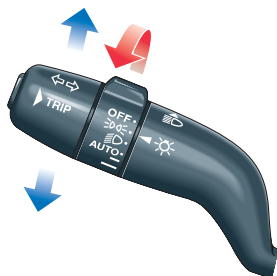

Move the lever up or down to activate the direction indicators.



Push the lever away from you to select headlamp high beam. To flash the headlamps, pull the lever towards you and then release.

Rotate the collar on the lever to select:


- Side lamps.
- Headlamps.
- Autolamps.
- Headlamp exit delay.

In **AUTO** mode, a sensor monitors the exterior light levels and will automatically switch the side lamps and dipped headlamps on and off.

### Automatic exterior lamps

 If Autolamps is selected and the windshield wipers are operated continuously for more than 20 seconds, the exterior lamps will switch **ON** automatically.

## Wipers and washers

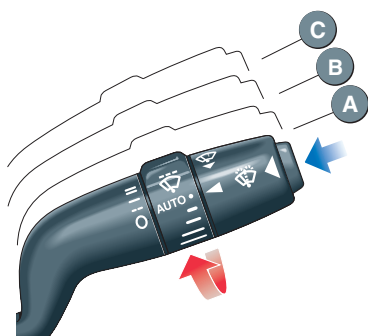


- A** Intermittent wipe. Move up once.
- B** Slow speed operation. Move up twice.
- C** High speed operation. Move up a third time.

Press end button for windshield wash or wipe. Rotate collar to adjust speed of intermittent wipe or to select **AUTO** for automatic operation of the wipers.

### Enabling automatic operation

 The wiper lever must be in position **A** and **AUTO** selected on the collar to enable automatic operation of the wipers.

## Electric Parking Brake

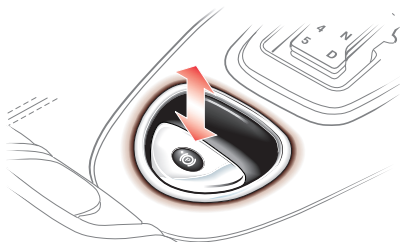


- The parking brake will automatically release when the gear selector is moved from **P** (Park) and will automatically apply when the starter key is removed.
- The parking brake can be manually released when the engine is running and the footbrake is applied. Press the parking brake switch down to release and pull it up to apply.
- If manually applied whilst in **D** (Drive) or **R** (Reverse) the parking brake will automatically release when the accelerator is applied.

## Cruise (speed) control

 Speed control is the standard cruise control system, where the vehicle will maintain a set road speed until either cruise control is cancelled or the brake pedal is used.

The system is controlled via switches on the steering wheel:

1. **RESUME** - to resume a set speed retained in memory.
2. **SET** - to set the road speed to be maintained, or to increase or decrease the speed in 2 km/h (1 mph) steps when cruise control is operating.
3. **CANCEL** - cancels cruise control, but retains the set speed in memory.

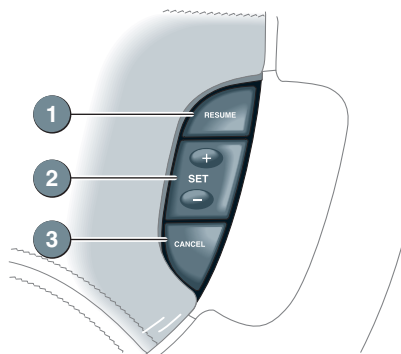

### Brake pedal override

Cruise control will automatically disengage when the footbrake is pressed or when the vehicle speed falls below 26 km/h (16 mph).

## Adaptive Cruise Control (ACC)

Adaptive Cruise Control will maintain a gap to the vehicle ahead or maintain a set road speed if there is no slower vehicle ahead.

 
The system is controlled via switches on the steering wheel. Switches 1, 2 and 3 operate in the same way as standard Cruise (speed) Control.

4. **GAP** - increase or decrease the time gap to the vehicle ahead.

The gap to the vehicle ahead can be changed to one of four pre-defined intervals and the current setting will be displayed in the message centre.



When a vehicle ahead enters your lane, or a slower vehicle is encountered in the same lane, road speed will automatically be adjusted to maintain the currently selected time gap. The warning indicator will illuminate to indicate that the vehicle is in follow mode.

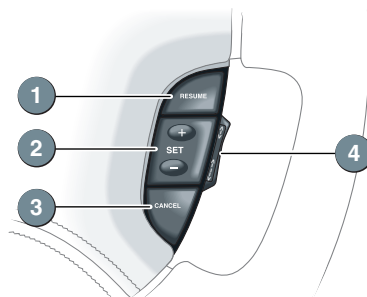


Adaptive Cruise Control **is not** a collision warning or avoidance system. Additionally the system **will not detect**:

- Stationary or slow moving vehicles below 10 km/h (6 mph).
- Pedestrians or objects in the roadway.
- Oncoming vehicles in the same lane.

# Audio system
 
## Key features

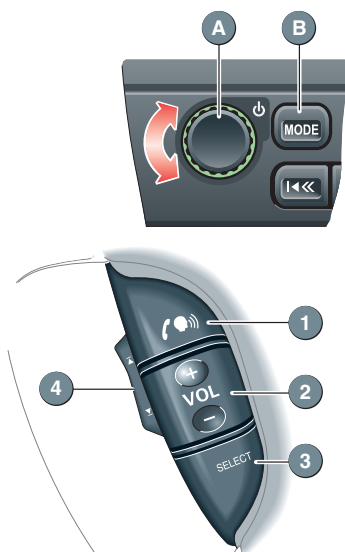

### General operation

Press the control **A** to switch the audio system on then rotate to adjust the volume.

To adjust the sound settings, press the **MODE** button **B** repeatedly, until the required setting is displayed. Turn the control knob **A** to adjust the level or rating.

After approximately five seconds, the system will return to normal control mode.

### Steering wheel controls

1. Press to mute the audio unit.
2. Press to adjust volume.
3. Press and release to cycle through Radio, FM, AM, CD and CD multichanger.
4. Press and release to cycle through preset radio stations or to skip to the next CD track. Press and hold for at least two seconds to cycle to the next strongest station or next CD.

## Radio operation

To switch on the radio, press the rotary control. To move to radio mode when in another mode, press the **MODE** button or the **AUDIO** button on the touchscreen

To search for a radio station, press the **Seek** arrow buttons.

### Setting the radio presets

Once a radio station has been tuned, press and hold the desired preset button (or touch a station position on the touch screen) until a beep is heard. The preset is now stored.

Nine presets can be stored for each waveband.

The Auto Memory function can programme the nine strongest stations on a waveband to your presets. Press and hold the **A MEM** button for two seconds. The radio will mute while it searches the waveband.

To select a stored station, briefly press the **A MEM** button then press or touch the required radio preset button (1 to 9).

### Activating TA (Radio Broadcast Data System)

Press the **TA** button until **RBDS ON** is displayed. With RBDS activated and FM selected, RBDS station names will be displayed. RBDS also displays the type of broadcast material, e.g. Rock, News, Classical.

To de-activate this feature, press and release the **TA** button again.

### Satellite radio channels

Press the **BAND** button until **SAT1** or **SAT2** is displayed.

To subscribe to SIRIUS you will need their telephone number and the unit ID. Touch the **Options** button then **More**. The information will be displayed.

For a first time user the easiest method of station tuning is via category selection. Touch the **CAT** icon to display station types. Make your selection and a choice of stations will be displayed. Select as desired.

### Satellite presets

To store a station as a preset, touch and hold your selection until it is highlighted. The station is now stored.



## CD operation

 
 
### Single CD player

CD

When a CD is loaded into the aperture, it will load and play automatically.

When in CD play mode, press the **CD** button to pause the current track. A subsequent press of the **CD** button will resume play.

Six discs can be loaded into the multichanger unit, and a further single disc into the audio console (when fitted).

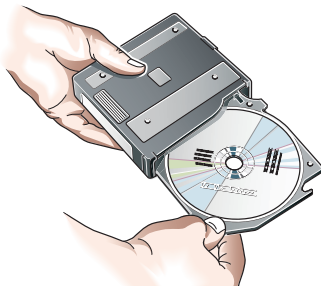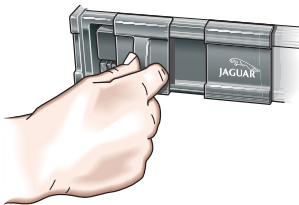

### Care point

Remember to close the multichanger door - this will prevent dirt getting into the unit and help reduce skipping.



To skip tracks, continually press the **Seek** arrow buttons to move back or forward accordingly. Pressing and holding these buttons will search through the selected track.



When a disc is inserted, the CD icon is displayed. Press the disc **Eject** button to eject the CD. The display will show **DISC EJECT** and the CD icon will be turned off.

### CD Multichanger

The CD multichanger is located in the luggage compartment. To load a CD into the multichanger:

1. Slide open the multichanger door, press the **Eject** button and remove the magazine. Close the door.
2. Pull a tray out from the magazine and insert a CD (label side up). Slide tray into magazine until a click is heard.
3. Slide open the multichanger door and ensuring correct orientation, replace the magazine. Ensure the magazine clicks into position.

### CD selection

CDC

1. Press the **CDC** button to select the CD multichanger mode.
2. Press preset buttons **1** to **6** to select the appropriate CD loaded in the multichanger.

If a touch screen is fitted to the vehicle, disc selection can be made by touching the relevant numbered disc icon.

3. When playing a CD, press the **CDC** button to pause play. Press again to continue play.

### Playing random tracks

MIX

To play random tracks from the disc, press and release the **MIX** button. To cancel, press the **MIX** button again.

To play random tracks from all discs loaded in the multichanger, press the **MIX** button for two seconds. To cancel, press and hold the **MIX** button.

# Navigation and telephone systems

## Navigation

 
The touch-screen requires only a light touch to operate the navigation system. Excess pressure on the screen could result in damage. On initial activation, ensure that both the correct country and area have been selected.

**Route Preferences** should be checked and selected prior to setting a destination. Access via **Nav menu** then **Route Options**.

### Setting a destination



1. Press the **NAV** button (arrowed in illustration), and when prompted, touch **Agree** on the touch screen to access the initial map screen.
2. Touch **Nav menu** to access the navigation menu, and then touch **Destination Entry**.
3. Touch **Address** to enter the destination details for the desired route.
4. Enter the **Street** name using the on-screen keypad. When sufficient characters have been entered, touch **List** to view a list of possible street names.
5. Select the required street.
6. Select the required **City** for your destination.
7. Touch **OK** to enter the destination and then touch **Dest** to calculate the route.

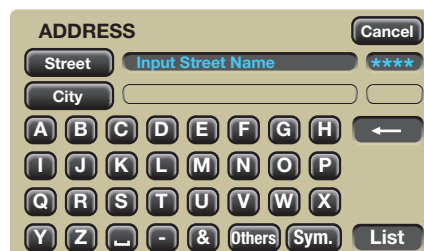


If there is only one city that has a matching street name then this step will be omitted..

8. Once calculated, the screen displays the route. To scroll through alternative routes, touch **Next** on the screen.
9. Touch **Start** to commence navigation. Drive away, following the voice guidance. When your destination is reached, voice and visual confirmation is given.



 Press the **Audible repeat** button to hear the last voice instruction again. Audible guidance can be selected or deselected via the **Nav menu**.

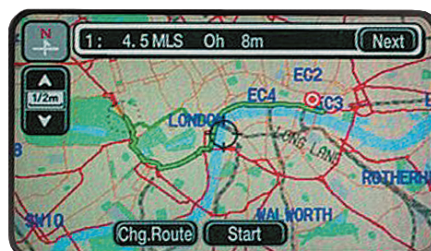

### Cancelling guidance

To cancel guidance during navigation, touch the zoom icon, select **Change Route**, then **Cancel Guidance**.




## Telephone – Bluetooth system

Bluetooth phones can communicate with the vehicle's inbuilt telephone system.

The following procedure demonstrates how to connect the most popular brands of mobile phone.

### Pairing a handset to the vehicle

1. Turn the starter switch to position **II**.
2. Press the  button on the audio panel. Ensure that no mobile phone is connected to the system. The touch screen will display the message **Discover me**. On non-touch screen systems the message **SIG\*\*\*\*** or **SIG\*\*\*\*\*** will be displayed.
3. Prepare the handset for pairing to the system.

See the telephone manufacturer's instructions for further details, or follow the table below for generic commands.

When the handset has been successfully paired

Nokia	Motorola	Ericsson
1 Select Menu	Select Menu	Select Menu
2 Select Settings	Select Settings	Select Connectivity
3 Select Bluetooth or Connectivity then Bluetooth	Select Connection	Select Bluetooth
4 Select On	Select Bluetooth link	Select My Devices
5 Select Search for audio devices	Select Hands-free	With New Device highlighted, select Add. Press OK to confirm
6 After search, select Jaguar	Select Look for devices	After search, select Jaguar
7 Enter pass code 1313. Press OK to confirm.	After search, select Jaguar	Select Connect
8 No connection? Select Bluetooth (Menu) then Paired devices Jaguar	Permission to bond? Select Yes, and enter pass code 1313	Enter pass code 1313 after prompt


to the system, the touch screen message changes to **Registered** followed by the message **Phone Connected**. On non-touch screen systems, the audio system message changes to **SIG \***.

For best results when pairing , ensure the handset is fully charged.

### Mobile phone compatibility






There are a number of mobile phones that have been tested to function correctly with the Jaguar system; however, not all mobile phones are compatible. For the latest list of compatible phones and software versions, please refer to [www.ownerinfo.jaguar.com](http://www.ownerinfo.jaguar.com). Alternatively consult your Jaguar Dealer.

### Downloading phone book entries



1. Turn the starter switch to position **II**, and ensure the handset is paired to the vehicle's system.
2. Press the  button.
3. Switch off the starter switch and wait for your phone to disconnect from the vehicle to allow the system to complete the download process.

### Making a call



1. Press and hold the **SELECT** switch on the steering wheel control, or press  on the audio panel. **Phone** will be displayed.
2. Key in the phone number required using the on-screen or audio panel keyboard.
3. Press  on the steering wheel control, or  on the audio panel. **Calling** will be displayed.
4. To end call, press  on the steering wheel control, or  on the audio panel.

### Receiving a call

To answer or end a call, press  on the steering wheel control or  on the audio panel.

# Gas station information

## Fuel filling

### Fuel filler flap location



A small **arrow** on the fuel gauge indicates which **side** the fuel filler flap is located.

 
### Fuel filler flap release



The fuel filler flap can only be opened when the vehicle is unlocked.

Press the fuel filler flap release button on facia to open.

### Docking the filler cap

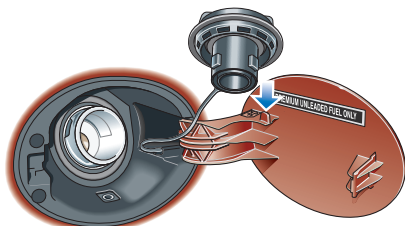

The filler cap is secured to the vehicle by a strap. For your convenience, a hook is provided on the flap to hold the cap whilst refuelling.

### Fuel specification

 
The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap.

Equipment necessary for use of fuels containing more than 10 per cent ethanol is not fitted to this vehicle.

Do not use E85 fuels (85 per cent ethanol content). If E85 fuels are used serious engine and fuel system damage will occur.

## Tire pressures

### Tire pressure label

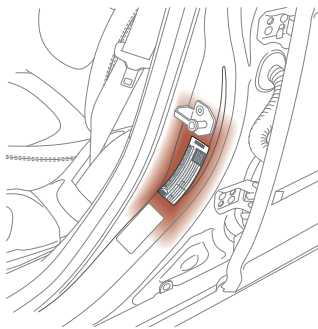

The correct tire pressures for your vehicle are shown on the label attached to the pillar behind the driver's door.

### TIRE PRESSURE REMINDER

For your convenience, record the tire pressures specific to your vehicle.

Front

Rear

### Incorrect fuelling

If the vehicle is filled with the wrong type of fuel:

- DO NOT start the engine!
- Call for Roadside Assistance!