



XJ

QUICK START GUIDE

VEHICLE ACCESS	02
COMFORT AND SAFETY	04
CLIMATE CONTROL	07
FACIA OVERVIEW & TRANSMISSION	08
DRIVING	10
AUDIO SYSTEM	12
NAVIGATION AND TELEPHONE SYSTEMS	14
FILLING STATION INFORMATION	16

Some of the information in this guide may not apply to your vehicle.
You must refer to your Owner's Handbook for full operating instructions.

Vehicle access

Locking and unlocking

Dependent upon specification and vehicle configuration, the operation of the remote handset may differ from the following.

Remote handset








Two stage unlocking

This is a security feature that unlocks only the driver's door and luggage compartment on the first press of the button. It can be selected via the navigation system user operation menu (where fitted). Alternatively this can be set by your Dealer/Authorised Repairer.

A 45 second automatic door relock can also be set by your Dealer/Authorised Repairer.

Unlocking with the door key

 
If the vehicle is unlocked manually via the door lock, the key must be inserted in the starter switch within 15 seconds to prevent the alarm being activated.

-  • Press to release door key.
-  • Press once to lock the vehicle and arm the alarm.
- Press twice within three seconds to double-lock the vehicle and fold the mirrors.
- Press and hold to close the sunroof and any open windows (**Global closing**).
-  • Press once to disarm the alarm, unlock the driver's door and unlock the luggage compartment.
- Press again to unlock remaining doors.
- Press and hold to open the sunroof and windows (**Global opening**).
-  • Press once to switch the headlamps on for 25 seconds.
- Press three times in three seconds to activate the panic alarm.
-  • Press to unlock and open luggage compartment.

Central door locking

With the starter switch in position I or II, press the facia switch (arrowed) to lock or unlock all the doors, luggage compartment and fuel filler flap.

To close or open the windows and sunroof, press and hold the switch.

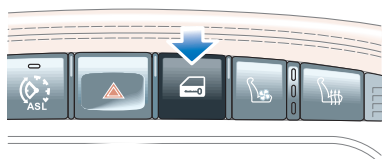

Drive away door locking

With the starter switch in position II, the luggage compartment, doors and fuel filler flap will automatically lock when the gear selector is moved from P (Park) or N (Neutral).

This feature can be disabled by your Jaguar Dealer/Authorised Repairer.

Reminder - Fuel filler flap

The driver's door must be unlocked before operating the fuel filler flap release button.

Luggage compartment

The luggage compartment is electrically locked and unlocked in conjunction with the driver's door.

To open the luggage compartment with the vehicle locked:

 
- Press the luggage compartment button on the remote handset.

To open the luggage compartment with the vehicle unlocked:

- Press button 1 on the facia.
- Press the release button 2 on the luggage compartment lid.

Care points

- Release buttons on the facia and luggage compartment lid are disabled when the vehicle is alarmed or in Valet mode.
- The luggage compartment has a power closure feature which removes the need to slam the lid.
- The vehicle alarm will sound if the luggage compartment is opened with the key when the vehicle is locked.

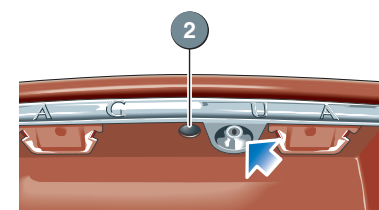

In the event of a flat battery, or other problem opening the luggage compartment, use the starter key in the luggage compartment lock (arrowed in illustration).

Valet locking

A green-headed valet key is supplied for when you have your vehicle valet parked. With Valet mode active, the luggage compartment and glove compartment release switches are inhibited.

 
To activate Valet mode:

- Press the **VALET** switch, an audible chime will sound to confirm operation. If the starter switch is in position II the message centre will display **VALET MODE**.
- Turn off the starter switch, remove the standard remote handset and hand the green-headed key to the parking attendant.
- Access to the luggage compartment and glove compartment is regained when the unlock button of the standard remote handset is pressed.




Comfort and safety

Seat adjustment

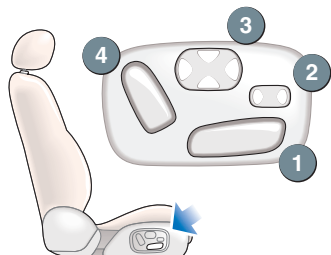

Driver's seat

 1. Seat forwards and back, cushion height and front tilt control switch.
2. Seat cushion extension switch (if fitted).
3. Lower backrest lumbar support switch.
4. Seat recline and head restraint height switch.

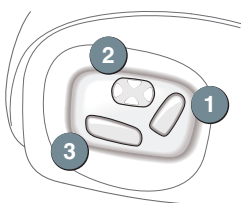


Rear seat

1. Backrest recline and head restraint height switch.
2. Lower backrest lumbar support adjustment.
3. Front seat position (for rear passenger comfort).

Rear seat controls inhibitor

The rear seat controls will be inhibited if the rear window isolation switch has been operated (see **Windows and Door mirrors**).

 Steering column and Pedal adjustment

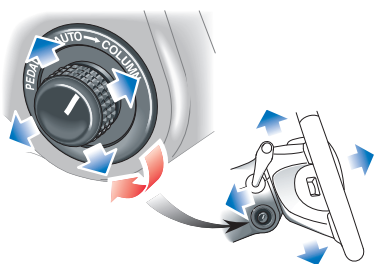


Steering column

Turn the control on left-hand side of steering column to **COLUMN** and move control to adjust the height and reach.

Automatic seat movement

 To prevent automatic movement of the driver's seat when the starter switch is turned on or off, turn the control to either **PEDALES** or **COLUMN**.

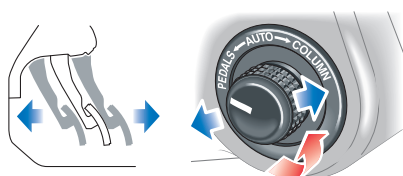

Pedal adjustment

 
Turn the control to **PEDALES** and move control to adjust the fore/aft position of the pedals.

Driver seat movement with starter switch off

If the control is set to **AUTO**, the position of the steering column and driver's seat will automatically adjust to provide greater clearance for exit and entry when:

- the starter switch is turned to position **0** and the driver's door is opened.
- the starter key is removed.

Windows and Door mirrors

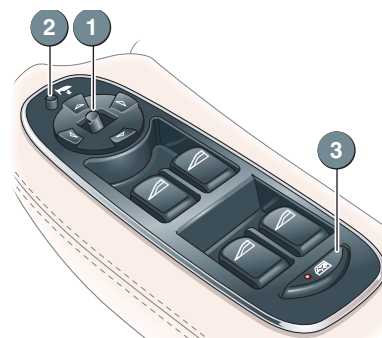

Door mirrors

To adjust the door mirrors, move the mirror selector switch **1** left or right to select the appropriate mirror. Use the four-way switch to adjust the position.

Automatic mirror dip

The passenger mirror will automatically dip to provide a better view along the side of the vehicle when reverse is selected.

Power fold mirrors

The mirrors can be folded towards the door for better clearance/protection by pressing button **2**. Press the button again to unfold the mirrors.

The mirrors will automatically unfold next time the vehicle is unlocked with the handset.

Reminder - Global closing

If any apertures are left open when leaving the vehicle and global closing is enabled, press and hold the remote handset lock button to close them.

 
Windows

The windows can be fully opened or closed with a single operation of the switch.

- To open the window, press the respective window switch. Press the switch again to stop the window from fully opening.
- To close the window, pull the switch up. Pull the switch again to stop the window from fully closing.

Press button **3** to inhibit the operation of the rear window switches and electric rear seats (when fitted).

Driving position memory

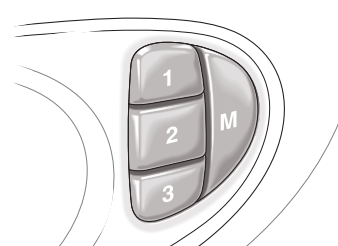

Remote handset programming

With the key in the starter switch and the **M** button illuminated, you can program a remote handset to a memory position by pressing any button on the remote handset.

Once you have adjusted the driver's seat, steering column, pedals and exterior mirrors for your ideal driving position, the vehicle can memorise these settings for future use.

1. Insert the key into the starter switch and leave in the **OFF** position.
2. Push the memory button **M** and a red indicator in the switch will illuminate for five seconds.
3. While the indicator is illuminated, press button **1**, **2**, or **3** to memorise the current settings.

The indicator will extinguish and an audible chime will sound to confirm that the settings are memorised. Any existing settings will be overwritten.

To recall a memorised driving position press button **1**, **2** or **3**.

Comfort and safety

Seat belts and Child restraints



A warning indicator on the instrument pack will illuminate to alert you that the driver's and/or front passenger's seat belt is unbuckled. Dependent upon specification this may be accompanied by an intermittent chime.

Child seats

It is important to remember that your child's weight, rather than age, determines the type of seat that is required.

Refer to **Child Safety** in the Owner's Handbook to determine the correct seat for your child.

Recommended child seat

Jaguar's recommended Group 1 seat is the Jaguar ISOFIX child restraint with a top tether. The ISOFIX child seat can only be fitted in the outer rear seating positions.

Automatic Locking Reels (ALR)

 
All passenger seat belts have ALR fitted for use with child seats.

- To engage: extend the belt to maximum length to enable locking mechanism.
- To disengage: unbuckle the belt and allow the belt to fully retract.

With ALR enabled, as the seat belt retracts, it will automatically lock preventing re-extension.

Ensure passengers do not fully extend the restraints and inadvertently engage this feature during normal use.

Overhead console

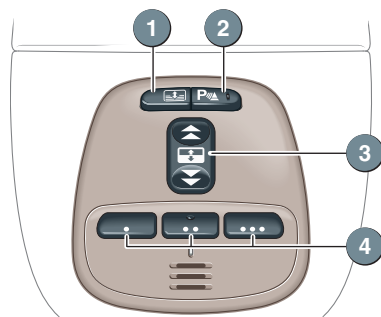

Rear window blind

Press button **1** to raise the rear window blind. Press the button again to lower the blind.

Parking assist

Press button **2** to turn off the front and rear parking sensors.

Sunroof

The sunroof can be fully opened or closed with a single operation of switch **3**.

Closing remotely

If the sunroof is left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset.

Garage door opener

The buttons **4** on the overhead console can be programmed to transmit radio frequencies that can operate external devices, i.e. garage doors, entry gates, security systems, etc.

Parking assist care points

Sensors may activate on detection of water, snow or ice on their surface. This is entirely normal and regular cleaning will aid performance.

Parking assist may sound if it detects a signal operating at the same frequency to that of the sensors (e.g. motorcycles, airbrakes).

Climate control

Climate control



1. CLIMATE.

Press to select climate control touch screen.

Recommended mode

Select **AUTO** as the normal operating mode. This will help prevent window misting.

2. AUTO.

Press to select automatic operation of the climate control system.

The system will adjust heat, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce window misting, without further adjustments.

Screen heaters and timed air recirculation may be selected while in **AUTO** mode.

Selecting any other function will cancel **AUTO** operation.

3. Temperature selection.

Press the red or blue buttons to adjust temperature. To quickly jump from **HI** or **LO** to a mid-range temperature setting, press and hold the **AUTO** button for a few seconds.

4. R (Heated rear screen and door mirrors).

5. F (Heated front screen).

 
Screen heaters

The screen heaters will automatically activate on operation of the **DEF** button or detection of exterior temperatures at 5°C (40°F) or lower.

6. DEF (Defrost and demist mode).

Press to remove frost or heavy misting from the screens. The front and rear screen and door mirror heaters will be activated. Air conditioning will operate and the blower operates at high speed. Speed can be manually adjusted.

To deselect air conditioning and blower, press **DEF** again or **AUTO**.

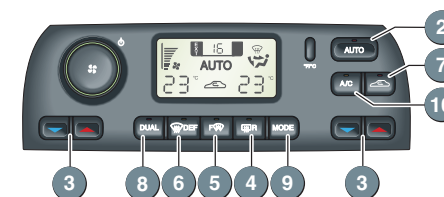

7. Air recirculation.

Press to stop outside odours from entering the vehicle or to improve performance of the air conditioning system in regions of high ambient temperatures.

8. Dual temperature zones

Press the **DUAL** button to provide separate temperature control for the driver and front passenger zones. **DUAL** will illuminate.

Press again to deselect dual mode. The temperature of the passenger zone will automatically adjust to that of the driver's zone and the temperature of both zones will be controlled by the driver's temperature control buttons.

9. Air distribution controls - touch screen.

9. Mode - manual air distribution.

10.A/C (Air conditioning).

Press to provide cooled and dehumidified air for occupant comfort; the dry airflow is also effective in preventing misting of the windows.

 
Air conditioning is controlled automatically when the vehicle is in **AUTO** mode.

Deselecting **A/C** will cancel **AUTO** mode.

External water deposits

The air conditioning system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

Facia overview & transmission

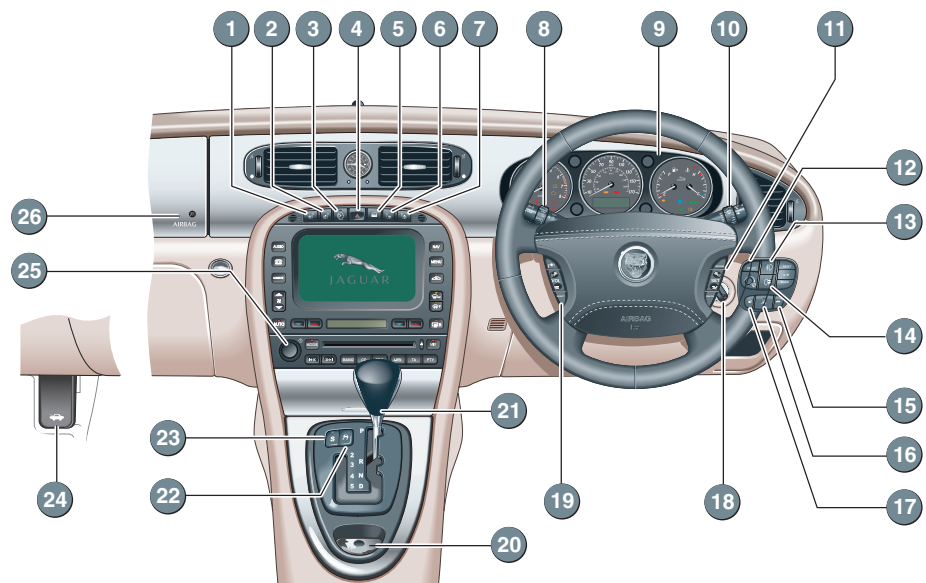

- | | | |
|---|---|--|
| 1 Passenger's seat ventilation switch | 10 Wiper and washer switch | 19 Audio and telephone switches |
| 2 Passenger's seat heater switch | 11 Cruise control switches | 20 Electric Parking Brake |
| 3 Automatic speed limiter switch | 12 Valet switch | 21 Gear selector lever |
| 4 Hazard warning switch | 13 Front fog lamp switch | 22 DSC switch |
| 5 Master locking switch | 14 Rear fog lamp switch | 23 Sport mode switch |
| 6 Driver's seat heater switch | 15 Luggage compartment switch | 24 Bonnet release |
| 7 Driver's seat ventilation switch | 16 Adaptive Cruise Control forward alert switch | 25 Audio system |
| 8 Direction indicators/exterior lamps and trip computer | 17 Fuel filler flap switch | 26 Passenger's airbag status indicator |
| 9 Instrument pack | 18 Starter switch | |

Passenger airbag status indicator



The front passenger seat occupancy sensor determines the state of seat occupancy and sets the airbag status to suit:-

- Seat unoccupied - airbag deactivated and indicator off.
- Seat occupied - airbag activated and indicator on.
- Seat occupied by a child seat or low weight object - airbag deactivated and indicator on.

- Passenger position too close to an airbag - airbag deactivated and indicator on. The yellow warning indicator is at position 26 in the Facia overview.

Warning lamps

The following will illuminate during normal driving to indicate that a particular system or feature is operating. If any other warning indicator illuminates, refer to the Owner's Handbook.



Seat belt reminder



Electric Parking Brake on



Adaptive Cruise Control active



Diesel glow plugs active



Side lamps on



Headlamp high beam on



Front fog lamps on



Rear fog lamps on



Overspeed warning indicator



Direction indicator

Diesel Particulate Filter (DPF)

If the message **DPF FULL SEE HANDBOOK** is displayed, refer to **Fuel and Refuelling** in the Owner's Handbook.

Transmission

Gearshift interlock

Starter switch must be in position **II** and the foot brake applied before the gear selector can be moved from **P** (Park) to **R** (Reverse).

 
The lever can be moved into **P** with the starter switch off.

Gear selector

The selector lever is designed to accommodate two different driving techniques as follows:

- Automatic selection: the right-hand side of the selector gate.
- Manual selection: the left-hand side of the selector gate to individually select 5th, 4th, 3rd or 2nd gear.

When Sport mode is active, fuel consumption is adversely affected.

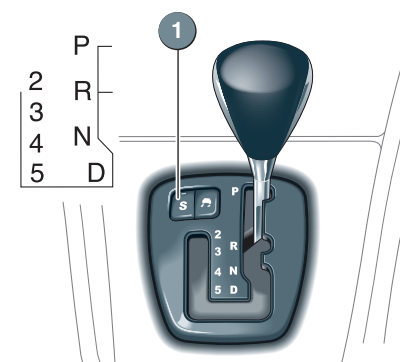


Sports mode

Press switch 1 to select Sports mode. A red indicator in the switch will illuminate to indicate that Sports mode is active. When Sports mode is selected, the gear change points are modified to make full use of the engine's power.

Driving

 Exterior lighting

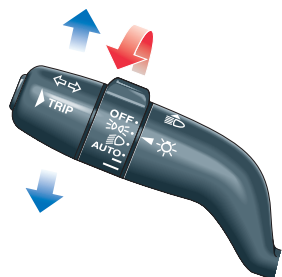

- Move the lever up or down to activate the direction indicators.
- Push the lever away from you to select headlamp high beam. To flash the headlamps, pull the lever towards you and then release.

Rotate the collar on the lever to select:

 
- Side lamps.
- Headlamps.
- Autolamps.
- Headlamp exit delay.

In **AUTO** mode, a sensor monitors the exterior light levels and will automatically switch the side lamps and dipped headlamps on and off.

Automatic exterior lamps

If Autolamps is selected, and the windscreen wipers are operated continuously for more than 20 seconds, then the exterior lamps will be switched **ON** automatically.

Wipers and washers

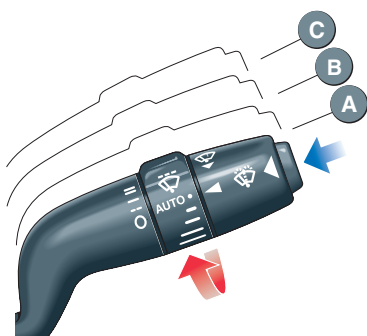


- A** Intermittent wipe.
- B** Slow speed operation.
- C** High speed operation.

Press button for windscreen wash or wipe. Rotate collar to adjust speed of intermittent wipe or to select **AUTO** for automatic operation of wipers.

Enabling automatic operation

The wiper lever must be in position **A** and **AUTO** selected on the collar to enable automatic operation of the wipers.

 Electric Parking Brake (EPB)

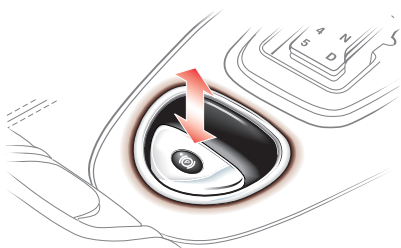


- The EPB will automatically release when the gear selector is moved from **P** (Park) and will automatically apply when the starter key is removed.
- To manually release the EPB while the engine is running, apply the footbrake and press the EPB switch down. Pull up and release to apply.
- If manually applied while in **D** (Drive) or **R** (Reverse) the EPB will automatically release when the accelerator is depressed.

Cruise (speed) control

Speed control is the standard cruise control system, where the vehicle will maintain a set road speed until either cruise control is cancelled or the brake pedal is used.

Control switches are on the steering wheel.

 1. **RESUME** - to resume a set speed retained in memory.
2. **SET** - to set the road speed to be maintained, or to increase or decrease the speed in 2 km/h (1 mph) steps when cruise control is operating.
3. **CANCEL** - cancels cruise control, but retains the set speed in memory.

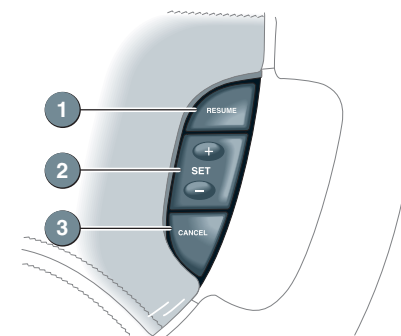

Brake pedal override

Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 26 km/h (16 mph).

Adaptive Cruise Control (ACC)

The Adaptive Cruise Control system is designed to aid the driver in maintaining a gap to the vehicle ahead, or to maintain a set road speed if there is no slower vehicle ahead.

 
Control switches are on the steering wheel.

1. **RESUME** - to resume a set speed retained in memory.
2. **SET** - to set the road speed to be maintained, or to increase or decrease the speed in 2 km/h (1 mph) steps when cruise control is operating.
3. **CANCEL** - cancels cruise control but retains the set speed in memory.
4. **GAP** - increase or decrease the time gap to the vehicle ahead.

The gap to the vehicle ahead can be changed to one of four pre-defined intervals and the current setting will be displayed in the message centre.



When a vehicle ahead enters the same lane as you, or a slower vehicle is encountered in the same lane, the road speed will automatically be adjusted to maintain the currently selected time gap. The warning indicator will illuminate to indicate that the vehicle is in follow mode.

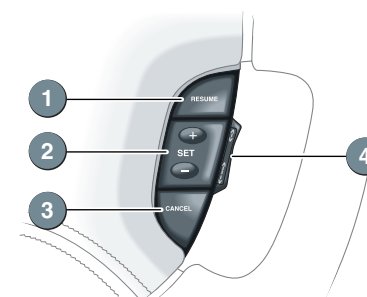


Adaptive Cruise Control **is not** a collision warning or avoidance system. Additionally the system **will not detect**:

- Stationary or slow moving vehicles below 10 km/h (6 mph).
- Pedestrians or objects in the roadway.
- Oncoming vehicles in the same lane.

Audio system

Radio operation

 
General operation

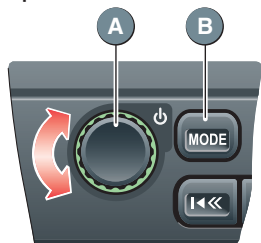

- A. Press for on/off. Rotate to adjust volume.
B. Sound settings. Press repeatedly to access required mode. Rotate **A** to adjust setting.
- After approximately five seconds, the system will return to normal control mode.

Steering wheel controls

 1. Press to mute sound.
2. Press as required to adjust volume.

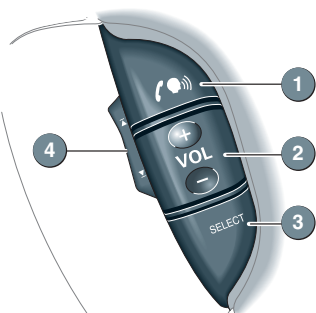

3. Press and release to cycle through Radio, FM, AM, CD and CD multichanger.
4. Press and release to cycle through preset radio stations or to skip to the next CD track. Press and hold for at least two seconds to cycle to the next strongest station or next CD.

Radio controls

- To switch on, press the rotary control.
- To move to radio mode when in another mode, press the **BAND** button or the **AUDIO** button on the touchscreen surround.

Press to search (Seek) for a radio station.

- | | | |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
- Setting the radio presets**
- Once a radio station has been tuned, press and hold a preset button (or touch a station position on the touch screen) until a beep is heard. The preset is now stored on that button.

Nine presets can be stored for each waveband.

A MEM Radio presets can be set automatically. Press and hold the **A MEM** button for two seconds. The radio will be briefly muted while it searches the waveband for the nine strongest stations.

To select an **A MEM** stored station, briefly press the **A MEM** button then press or touch the required radio preset button (1 to 9).

Digital Audio Broadcast (DAB) radio

BAND To receive digital broadcasts, press the **BAND** button repeatedly to choose either **DAB1** or **DAB2**.

The first time a DAB source is selected, dependent on the type of audio system fitted, **NO CHANNEL** or **NO CHANNEL FOUND** is displayed.

Press the **A MEM** button or touch screen **TUNE** button to build a list of all the digital ensembles and channels which are available in your region.

Up to 9 of these channels can be stored on each of the **DAB1** and **DAB2** preset buttons.

When tuning is complete the first channel found will start playing. To move to the next channel, press a Seek arrow button.

To store a playing channel, touch and hold a preset button (or touch a channel button on the touch screen) until a beep is heard. The preset is now stored on that button. Repeat procedure with the other preset buttons. Stored channel names will be shown on the display screen or the touch buttons. Use the preset buttons to recall stored channels.

Reception loss

When reception is lost, **NO RECEPTION** will be displayed. This will be either a temporary loss or you have reached the limit of the broadcast area.

CD operation

 
CD To skip tracks, continually press the Seek arrow buttons to move back or forward accordingly. Pressing and holding these buttons will search through the selected track. **Single CD player**

If the radio or CD multichanger is being used, pressing the **CD** button will resume playing any CD installed in the player mechanism.

When a CD is loaded into the aperture, it will load and play automatically.

Pressing the **CD** button, while in CD play mode, will pause the current track. A subsequent press of the **CD** button will resume play mode.

Six discs can be loaded into the multichanger unit, and a further single disc in the audio console (when fitted).

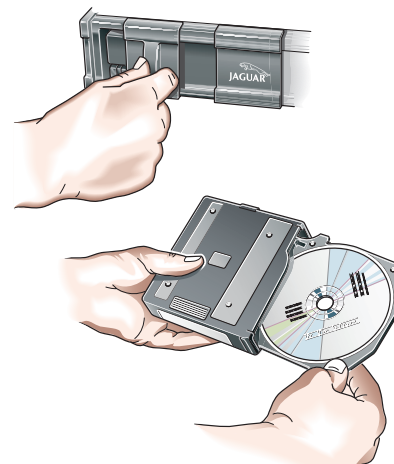

Care point

Remember to close the multichanger door - this will prevent dirt getting into the unit and help reduce skipping.

To skip tracks, continually press the Seek arrow buttons to move back or forward accordingly. Pressing and holding these buttons will search through the selected track.

Eject When a disc is inserted, the CD icon is displayed. Press the disc **Eject** button to eject the CD. The display will show **DISC EJECT** and the CD icon will be turned off.

CD Multichanger

The CD multichanger is located in the luggage compartment. To load a CD into the multichanger:

1. Slide open the multichanger door, press the **Eject** button and remove the magazine. Close the door.
2. Pull a tray out from the magazine and insert a CD (label side up). Slide tray into magazine until a click is heard.
3. Slide open the multichanger door and ensuring correct orientation, replace the magazine. Ensure the magazine clicks into position.

CDC CD selection

1. Press the **CDC** button to select the CD multichanger mode.
2. Press preset buttons 1 to 6 to select the appropriate CD loaded in the multichanger. If a touch screen is fitted to the vehicle, disc selection can be made by touching the relevant numbered disc icon.
3. When playing a CD, press the **CDC** button to pause play. Press again to continue play.

MIX Playing random tracks

To play random tracks from the disc, press and release the **MIX** button. To cancel, press the **MIX** button again.

To play random tracks from all discs loaded in the multichanger, press the **MIX** button for two seconds. To cancel, press and hold the **MIX** button.

Navigation and telephone systems

Touch-screen navigation

The screen requires only a light touch to operate the function. Excess pressure could result in damage. On initial activation, ensure that both the correct country and area have been selected.

Route Preferences should be checked and selected prior to setting a destination. Access via **Nav menu** then **Route Options**.

 
Setting a destination

To set a destination and start using the navigation system, use the following procedure:

1. With the vehicle stationary, press the **NAV** button. When prompted, touch **Agree** on the touch-screen to access the initial map screen.




2. Touch **Nav Menu** to access the navigation menu, and then touch **Destination Entry**.
3. Touch either **Address** or **Postcode**.
4. Enter the address or postcode using the on-screen keypad, ensuring a space (arrowed key) is entered in the postcode. Touch **OK** to enter.

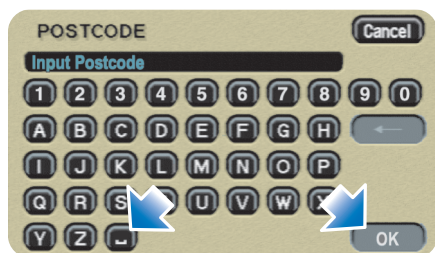

5. Touch **Dest** to calculate the route.

 6. Once calculated, the screen displays the route. To scroll through alternative routes, touch **Next** on the screen.

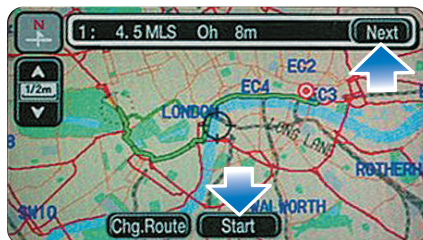

7. Touch **Start** to commence navigation. Drive away, following the voice guidance.

When your destination is reached, voice and visual confirmation is given.

Press the **Audible repeat** button to hear the last voice instruction again. Audible guidance can be selected or deselected via the **Nav menu**.

Cancelling guidance

To cancel navigation guidance, go to the **Route Options** menu. Access via **Nav Menu** or **Chg Route**. Select **Cancel Guidance** then confirm.

Telephone – Bluetooth system

Compatible Bluetooth mobiles can communicate with the inbuilt telephone system.

Bluetooth phone compatibility

For the latest list of phones and their softwares fully compatible with the Jaguar system, refer to www.ownerinfo.jaguar.com. or consult your Jaguar Dealer.

Use the following procedure in conjunction with your phone manufacturer's instructions.

Initial pairing of your phone to the vehicle

1. Turn the starter switch to position **II**.
2. Press the button on the audio panel. Ensure that no mobile phone is connected to the system. The touch screen will display the message **Discover me**. On non-touch screen systems the message **SIG****** or **SIG******* will be displayed.
3. Prepare the handset for pairing to the system.

See the telephone manufacturer's instructions for further details, or follow the table below for generic commands.

	Nokia	Motorola	Ericsson
1	Select Menu	Select Menu	Select Menu
2	Select Settings	Select Settings	Select Connectivity
3	Select Bluetooth or Connectivity then Bluetooth	Select Connection	Select Bluetooth
4	Select On	Select Bluetooth link	Select My Devices
5	Select Search for Audio devices	Select Hands-free	With New Device highlighted, select Add. Press OK to confirm
6	After search, select Jaguar	Select Look for devices	After search, select Jaguar
7	Enter pass code 1313. Press OK to confirm	After search, select Jaguar	Select Connect
8	No connection? Select Bluetooth (Menu) then Paired devices Jaguar	Permission to Bond? Select Yes and enter pass code 1313	Enter pass code 1313 after prompt

When successfully paired, the touch-screen message changes to **REGISTERED** followed by **PHONE CONNECTED**.

For best results when pairing your handset to the system, ensure the handset is fully charged.

On non-touch screen systems, the audio system message changes to **SIG ***.

Downloading phone book entries

1. Turn the starter switch to position **II**, and ensure the handset is paired to the vehicle's system.
2. Press the .
3. Switch off the starter switch and wait for your phone to disconnect from the vehicle to allow the system to complete the download process.

Making a call



1. Press and hold the **SELECT** switch on the steering wheel control, or press on the audio panel. **Phone** will be displayed.
2. Key in the phone number required using the on-screen or audio panel keyboard.
3. Press on the steering wheel control, or on the audio panel. **Calling** will be displayed.
4. To end call, press on the steering wheel control, or on the audio panel.


Receiving or ending a call

To answer or end a call, press or .

Filling station information

Fuel filling

Fuel filler flap location

 A small **arrow** on the fuel gauge indicates which **side** the fuel filler flap is located.

 
Fuel filler flap release



The fuel filler flap can only be opened when the vehicle is unlocked.

Press the fuel filler flap release button on facia to open.

Docking the filler cap

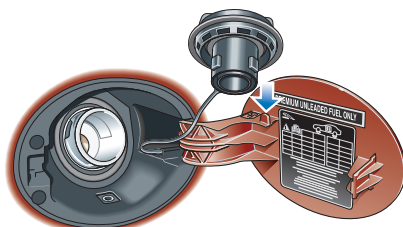

The filler cap is secured to the vehicle by a strap. A hook is provided on the flap to hold the cap while you add fuel.

Fuel specification

 
The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap.

Equipment necessary for use of fuels containing more than 10 per cent ethanol is not fitted to this vehicle.

Do not use E85 fuels (85 per cent ethanol content). If E85 fuels are used serious engine and fuel system damage will occur.

Tyre pressures

Tyre pressure label

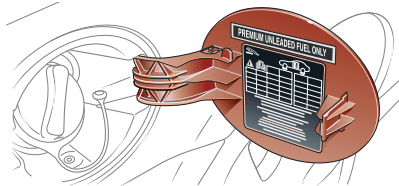

Tyre pressures are listed on a label located on the inside of the fuel filler flap.

TYRE PRESSURE REMINDER

For your convenience, record the tyre pressures specific to your vehicle.

	Front	Rear
Normal Driving		
Laden/ High Speed		

Incorrect fuelling

If the vehicle is filled with the wrong type of fuel:

- DO NOT start the engine!
- Call for Roadside Assistance!